
Battery Charging Warnings and Precautions

⚠ Warning: Failure to exercise caution while using this product and comply with the following warnings could result in product malfunction, electrical issues, excessive heat, FIRE, and ultimately injury and property damage.

- Read all safety precautions and literature prior to use of this product.
- Never leave the battery and charger unattended during use.
- Never allow minors to charge battery packs.
- Always inspect the battery for damage before charging.
- Never attempt to charge dead or damaged batteries.
- Never charge a battery if the cable has been pinched or shorted.
- Never allow batteries or charger to come into contact with moisture at any time.
- Never charge batteries in extremely hot or cold places (recommended between 50-80 degrees Fahrenheit /10-27 Celsius) or place in direct sunlight.
- Always use only MiMH rechargeable batteries. This charger cannot charge batteries such as “heavy duty,” “alkaline battery,” or “mercury battery.”
- Always connect the positive red lead (+) and negative black lead (-) terminals of the battery to the charger terminal correctly.
- Always disconnect the battery and charger after charging, and let them cool between chargers.
- Always terminate all processes if the product malfunctions.
- Always make sure you know the specifications of the battery to be charged or discharged to ensure it meets the requirements of this charger.
- Always constantly monitor the temperature of the battery pack while charging.
- Always end the charging process if the charger or battery becomes hot to the touch or starts to change form during the charge process.

Charging the Receiver Battery

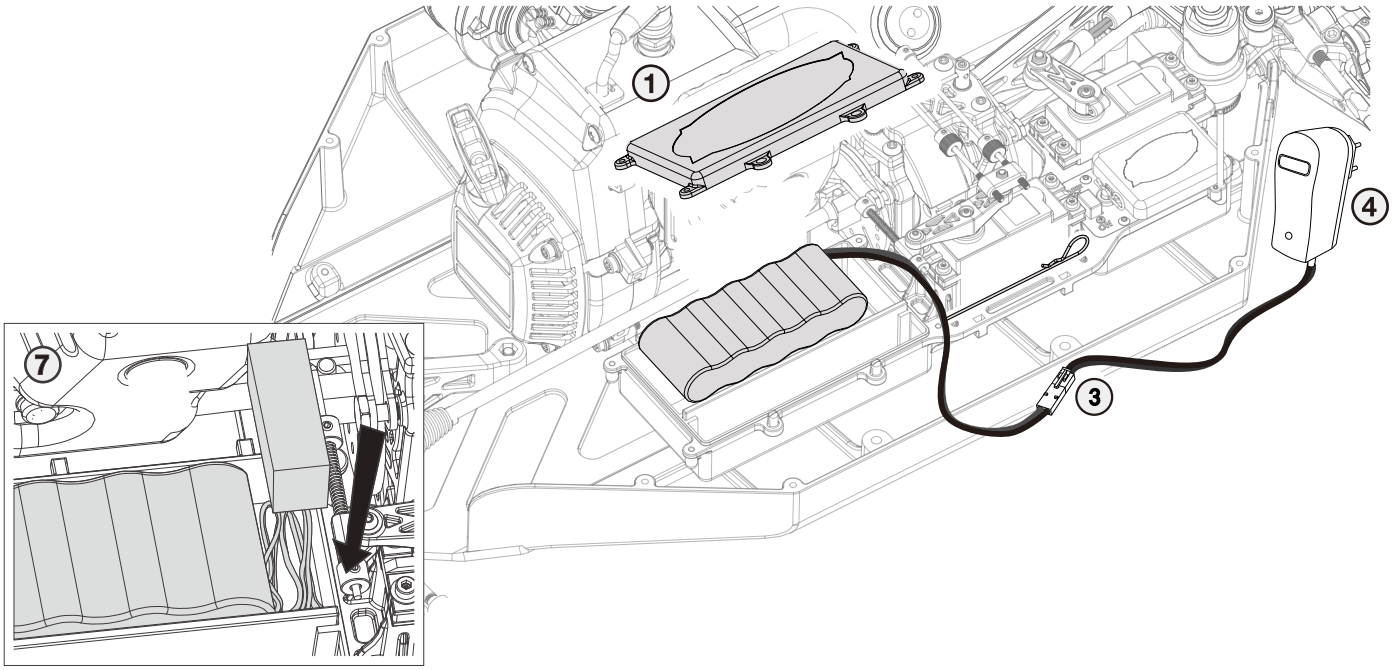

1. Remove the body pin and battery box lid.
2. Remove the receiver battery from the battery box.
3. Connect the receiver battery plug to the battery charger.
4. Plug the battery charger into an AC wall outlet. Charge the battery for 8 hours. DO NOT exceed 10 hour charge time.
5. Monitor battery while charging.
6. When the battery is fully charged: (a) disconnect the battery and (b) remove the battery charger from the wall outlet.
7. Place the receiver battery back in the battery box. The battery wire must be neatly folded in front of the battery and the foam block must be placed on top of the wires.
8. Reinstall battery box lid and body pin.