

Engine Start

Make sure choke lever is in the horizontal position before starting.
Start the engine by pulling the starter cord in short (No longer than 50cm max.)
The engine should never be run without the air filter in place.
If there is a problem with the engine, press the engine OFF switch to shut down the engine.

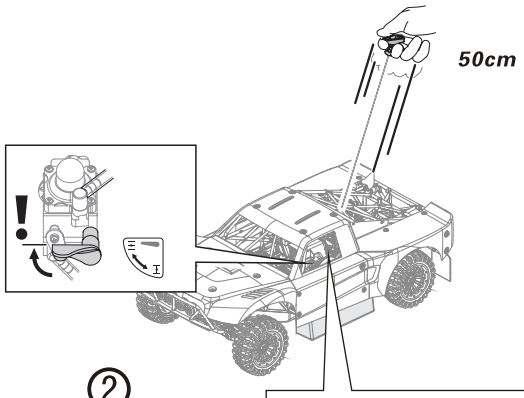

Engine Start Tips

1. If you have trouble starting the engine, move the choke lever to the vertical position Ⓐ
2. Pull the starter cord until you hear the engine is almost starting. then move the choke lever back to the horizontal position Ⓑ and try starting the engine.
3. If you pull the starter cord too hard while the choke lever is in the vertical position Ⓐ , you might flood the engine.

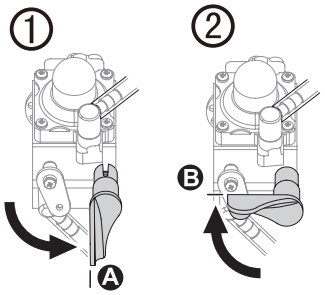

⚠ Caution


Engine OFF Switch

If there is a problem with the engine, press enging switch to shut down the engine.

PUSH

Breaking in the Engine

Break in the engine by driving slowly for the first half tank of fuel (about 60 minutes).

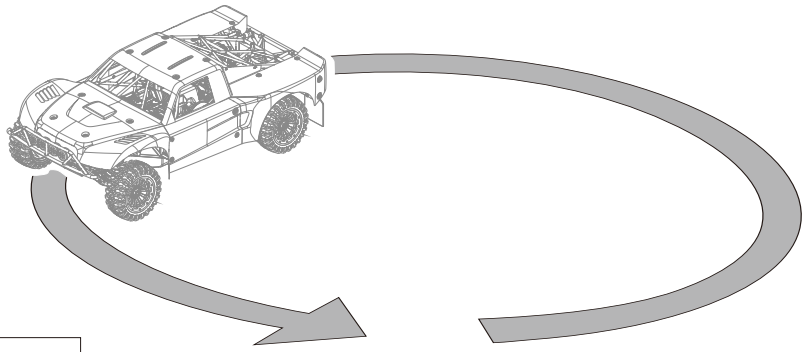


Engine Stop

You can shut down the engine by pushing the engine off switch.

⚠ Caution

! Be careful after running, the enging and muffler will be very hot.

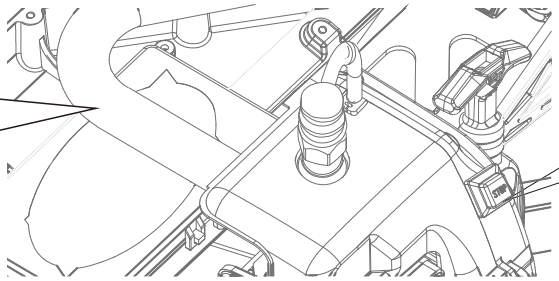

! Engine OFF Switch

PUSH

Turning R/C Off

After the engine is shut off, turn off the receiver first, then turn off the transmitter.

